


### Instructions for insulation

For insulation of **Swedspjäll** Serie 150 / 150-D dampers.

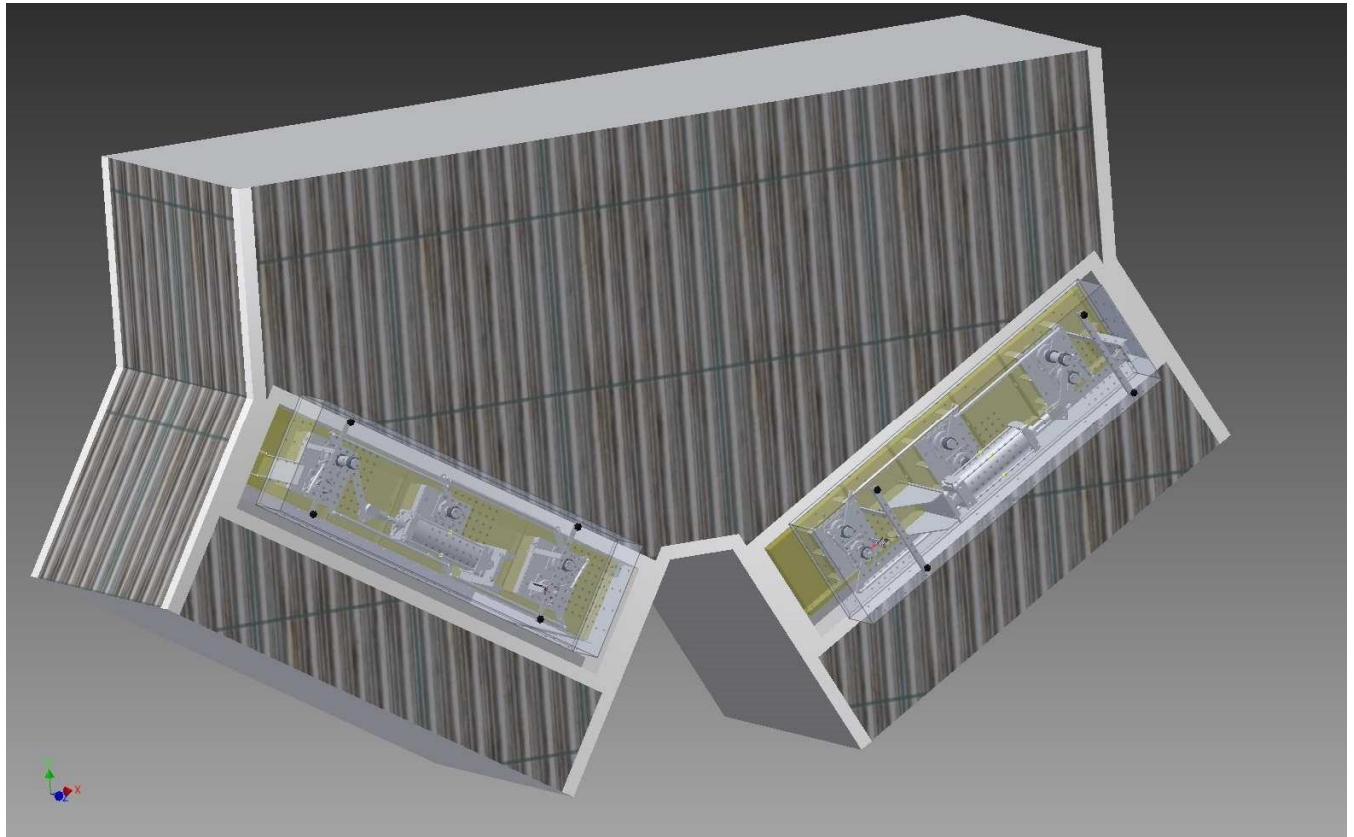

### **Damper housing**

Isolation thickness 200 mm

Welding rods for the isolation on the flanges

**(Don't welding** on the house -special on the outlet damper as this have painting inside the body for higher resistance against corrosion)

---

**Postadress:**

Metodvägen 2D

SE-435 33 Mölnlycke

**Telefon**

+46-313368780

[info@swedenborg.se](mailto:info@swedenborg.se)


**Telefax**

+46-313368799

**Vat. No.**

SE556093547901

[www.swedenborg.se](http://www.swedenborg.se)

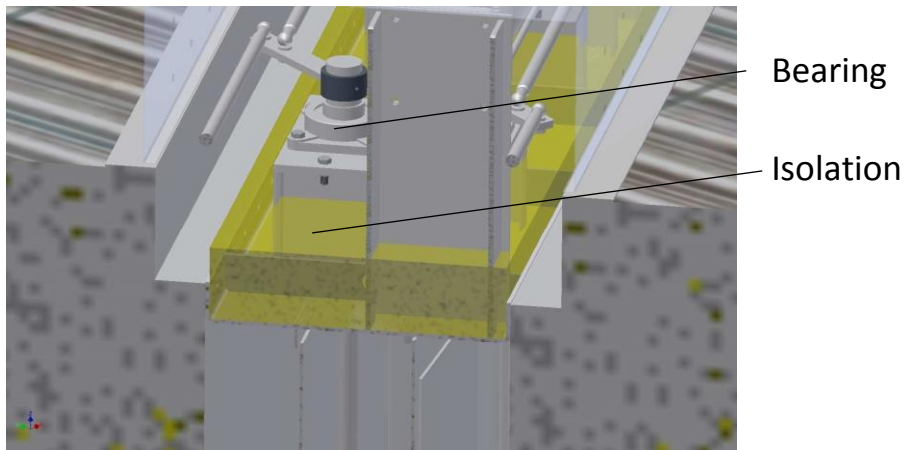

### Damper front side

The isolation around the damper shaft must be easily disassembled for adjust the shaft sealing (stuffing box)

Don't isolate the bearing.

If insulation is missing around the shaft - risk of overheating the cylinder and other equipment

---

**Postadress:**

Metodvägen 2D

SE-435 33 Mölnlycke

**Telefon**

+46-313368780

[info@swedenborg.se](mailto:info@swedenborg.se)

**Telefax**

+46-313368799

**Vat. No.**

SE556093547901

[www.swedenborg.se](http://www.swedenborg.se)